SAMSUNG WASHING MACHINE

User's Manual

WA95F3/WA90F3

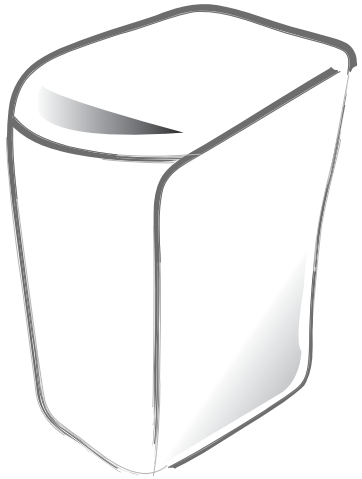

- *Please read this manual before using and note how to use in the proper manner.*
  Please be careful of keeping the manual.
  Otherwise, it should be bought separately.
- *The User's Manual is for common use.*
  Make use of the User's Manual depending upon your washing machine model.

FEATURES **2**
Keeping the tub clean 2
SAFETY INSTRUCTIONS **3**
DESCRIPTION OF PARTS **4**
CHECKING BEFORE WASHING AND CARING FOR GARMENTS **5**
CONTROL PANEL **6**
HOW TO WASH AUTOMATICALLY DEPENDS ON THE LAUNDRY **7**
Cleaning the tub 8
MANUAL FUNCTIONS **9**
INSTALLATION & MAINTENANCE **9**
Environment 9
Levelling 9
Connecting the water supply hose 10
Assembling the rat protection panel 11
How to connect the drain hose 11
How to add the fabric softener 12
How to put the detergent in 12
Water supply connector filter 12
Cleaning the filter. 12
How to clean the pump filter 12
TROUBLESHOOTING **13**
WASHING MACHINE WON'T WORK **13**
SPECIFICATIONS **14**

CODE NO.: DC68-02040Q_EN

Register your product at
www.samsung.com/global/register

FEATURES

■ **RUST-PROOF FIBER BODY**

- Made of durable material with rust-proof fiber body, it can endure humidity for an extended time.

■ **AUTO RESTART**

- The power is turned on automatically after power failure.

■ **SAVING ENERGY**

- The ECO+ COURSE, it is a wash course to saving the energy reduces laundry time for frequent and soiled clothes.

■ **DIGITAL CONTROL**

Digital control operates with best washing course by sensing the washload like artificial intelligence.

■ **TRANSPARENT WINDOW**

This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation.
While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

■ **PULSATOR** option

The Pulsator helps water and detergent to go through fabrics efficiently while providing both the powerful water action to clean lager and heavier clothes and the gentle water action to clean all delicates with less wear and tear on clothes.

■ **WATERFALL FLOW**

The Waterfall Flow injected from under the pulsator cascades with full force back into the tub, pushing down any clothes that float right under the water surface. It is this Waterfall Flow that enables this washing machine to effectively wash large and heavy items, such as bluejeans and blankets.

■ **MAGIC FILTER**

This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

■ **SOFTENER DISPENSER** option

The Softener Dispenser releases the fabric softener at the appropriate time when the last rinsing proceeds.

■ **SUPER CLEAN**

SUPER CLEAN adjust the level of water by 5 steps so as to enhance detergent efficiency by adjusting the density of detergent to normal density.

■ **CHILD-LOCK FUNCTION**

This is a device to protect children from being accidentally hurt while playing with the washer.

How to start Child-Lock function:

- Press the “Power” button to go to an initial washing mode.
- By pressing “Start/Hold” button, you start washing and in case Child Lock function is needed during the laundry
- Press both the “WATER LEVEL” and “FUNCTION” buttons in simultaneously and get the function started.
  (Note: You cannot perform the function without the “Power” button on.)

To release the function of Child-Lock:

- In case the “Child-Lock” is programmed, press both the “WATER LEVEL” and “FUNCTION” buttons in simultaneously.

※ **Keeping the tub clean**

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body. To keep the tub clean and hygienic at all times, it is recommended reading “Cleaning the Tub” above and using only dedicated or recommended detergents to clean the tub regularly at least once every one to three months.

SAFETY INSTRUCTIONS

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

When using hot water in washing, please make sure that the water should not exceed 50°C.

☞ Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING

There might be serious injury or fatal accident when you violate this instruction.

- If the plug (power supply cord) is damaged, it mustbe replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not pull the cord off or touch it with moist hands.
  – An electric shock or a fire may take place.
- Do not bend the power supply cord by force or press it with heavy hings.
  – An electric shock or a fire may take place.
- Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
  – A fire may take place.
- During operation, do not put your hands or metal materials under the washer.
  – You may be hurt by spinning board beneath the washer.
- Stay away from the washer when the bottom of the washer sinks into the water.
  – There might be an electric shock. Please wait until the water drains out completely.
- Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
  – An explosion or a fire may take place.
- During spinning, don't put your hand in the spinning tub.
  – It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
  Young children should be supervised to ensure that they do not play with the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- No user-serviceable parts inside. Refer any servicing to qualified service personnel.
  – Otherwise this may cause a mechanical error, electric shock, fire or physical damage.
  – The product warranty does not cover problems resulting from disassembling the product.
- Do not use this product for business purposes.
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

CAUTIONS

There might be a slight injury or damage when you violate this instruction.

- Don't install it in the area with moisture or outdoor where it has rain or snow.
  – An electric shock or a fire may take place.
- Please unplug the power supply cord when you do not use it.
  – An electric shock or a fire may take place.
- If there is dust or water on the power supply plug and its connected part, please remove it completely.
  – An electric shock or a fire may take place.
- Do not make your kids look into the inside of the washer.
  – If your kid falls into the washer, his life could be in danger.
- Ventilate immediately without touching the power plug if gas is leaking.
  – An electric shock or a fire may take place if it catches flame.
- If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
  – An electric shock or a fire may take place.
- When cleaning, don't spray water to the parts of the washer directly.
  – It may make it's life span shorten.
  Also an electric shock or fire may take place.
- Don't use several appliances together with an outlet.
  – A fire may take place due to unusual heat.
- Don't press the button with an awl or pin.
  – An electric shock or a fire may take place.
- Use the new hose-sets and old hose-sets should not be reused.
- If the damage is found on the current cord in use, it should be replaced by manufacturer, service cener or authorized person in order to avoid the risk.
- Connect the grounding wire to the shell plate, and bury it under at least 25cm of earth:elternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe. option

DESCRIPTION OF PARTS

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

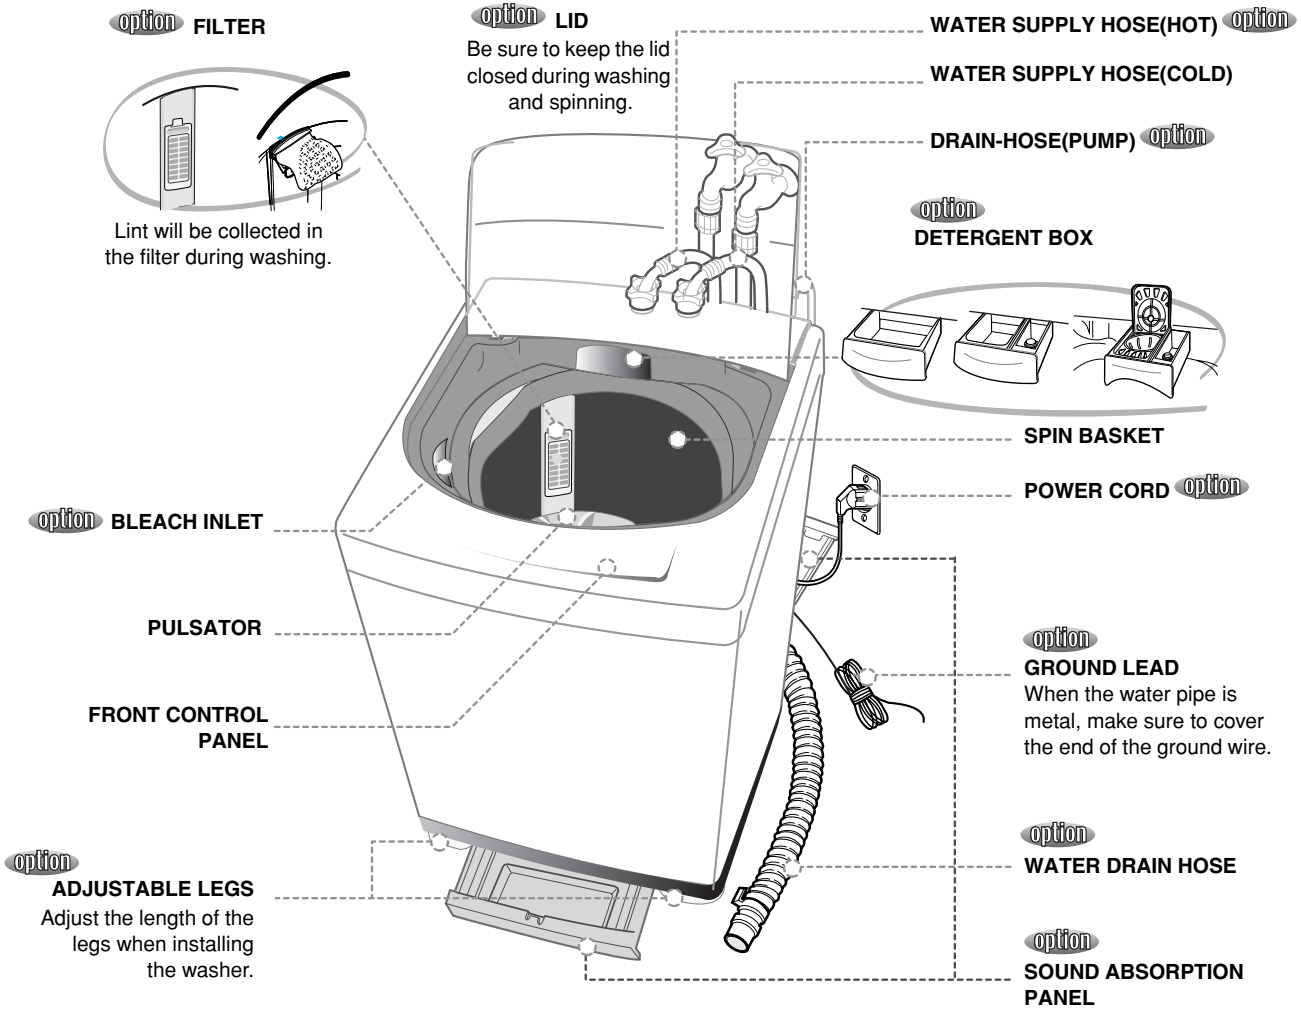

CHECKING BEFORE WASHING AND CARING FOR GARMENTS

Must follow the checkpoints in order to avoid machine problems or damages on garments.

☞ If the below problems are caused by customer's faults, separate service fee will be charged.

Checkpoints Before Starting Washing

Check if the clothes are bleaching or not.

☞ Add liquid detergent to a white towel and the garment where you can't notice well. Then, rub together strongly. Check if the color transferred to the towel.
☞ Be careful for scarves and imported clothes since they are easily discoloring.
☞ Check for stains or partial dirt.
☞ If stains are found, use the towel wet with detergents to rub on in a single direction.
☞ Before washing, the sleeves, collar, dress hem and pockets are pre-treated by brushing with detergents.

The wrinkle-processed clothes made of wool are specially treated by fixing them with threads before washing. The threads shall be removed after the clothes are dried.

Not washable laundry

Clothes those are easily transformable even by soaking in water.

☞ Even by soaking in water, neckties, brassieres, jackets, suits and coats can be easily transformed like shrinking and discoloring on the garment surfaces because they are mostly made of rayon, polynosic, cuff and their blend fabrics.
☞ The wrinkle-processed, embossed, or resin processed products are easy to transform even by soaking in water.
☞ Easily discoloring products made of cotton and wool, wrinkled silk, leather products, leather accessory, leather ornamented clothes and its accessory.
☞ Don't wash those clothes without handling guideline or material indication tag.

About Detergent

☞ When detergents are not dissolving well, use warm water (about 40°C) to dissolve the detergent.

Caution

☞ Use an appropriate amount.
☞ Even if excess amount of detergent is used, there is not much difference in washing result. It may cause damages to the garments because rinsing is not enough.
☞ The bleaching agent may cause damages to garments since it is strong alkali.
☞ Do sufficient rinsing because the powder detergent is easily remained on the garments causing bad odors.
☞ If too much detergent is used or cold water is used, it doesn't dissolve completely and remain on the garments, hose or spin basket, causing contamination on clothes.
☞ In case of reserved washing, detergents must be put in the detergent box. If the powder detergents are spread on laundry directly, it may cause discoloration.

CARING FOR CLOTHES BEFORE WASHING

☞ Must follow the checkpoints in order to avoid machine problems or damages on garments.
☞ If the below problems are caused by customer's faults, separate service fee will be charged.

Take out personal belongings from pockets.



☞ Caution, Check the pockets! Hairpins and coins cause damages to clothes and washing machine.
They make noise and problems to the machine. Must check the pocket.

If pants zippers are open while washing, the spin basket may be damaged. The zipper should be closed and fixed with a string before washing.

☞ If blue jeans and working uniform's zippers or hooks are made of steel, they must be closed before washing.
☞ Wash winter jumpers, working uniforms, bed cover sheets, and blue jeans separately.
☞ Fold clothes well into the spin basket. Must remove the curtain hooks before washing.
☞ Turn inside out the button decorated and embroidered clothes before washing.
☞ Be careful those metal decorations because they cause heavy damages while washing.
☞ The long stringed clothes may tangle with other clothes. Must fix the strings before washing.

☞ The metal from brassieres may stick out and damage other clothes or the spin basket. Must use the commercial laundry net for washing brassieres. (Use a laundry net of fine mesh.)

Waterproof clothes (Ski Wear, Diaper Covers, Footboards) are not allowed for washing.



☞ The waterproof sheet, clothes, and non water permeable fabrics shouldn't be washed, rinsed, or put in a spin basket. The laundry may pop out and cause severe vibration so that a person may get damaged and the machine, wall, and floor may break out in addition to clothes. (Examples are diaper cover, waterproof wear, raincoat, umbrella cover, ski wears, car cover sheet, and sleeping bags.)

Cautions During Spinning

☞ Spinning of regular garments
  – The water from garments is drained out through the spin basket holes.
☞ Spinning of waterproof clothes and fabrics
  – Even if the spin basket spins, water can't drain out from the waterproof clothes and fabrics. Therefore, water gathers to one side and this cause a severe vibration. If the spin basket spins at a high speed, water still can't drain out from the waterproof clothes and fabrics. As a result, garments move up and pop out with a big vibration.

Shake the dirt or soils from clothes.

☞ Soil and sands may rub delicate garments to cause damages and the washing result may be unsatisfactory.

For protection of baby skin

☞ Wash diapers and baby wears (baby clothes, baby towels etc) separately. Dirt may get to baby's clothes from adult's clothes if washing them together.

Do pre-washing for white socks, sleeves, and collars before the main washing.

☞ Use powder and liquid detergents.
☞ Don't' use soap. It may leave dirt to the spin basket.

Turn inside out for those nappy clothes before washing.



☞ If clothes have too much foreign matter, separate them for washing. Other clothes may pick up those dirty matters (dirt, thread).
☞ Wash black colored clothes and cotton towels separately. If they are washed together, towels may pick up dirty matters. Check before washing.

Cashmilon and those garments having big volume and lightweight (eg. lase-decorated clothes, lingerie, nylon stocking, synthetic fabrics etc.) may rise and cause damages to the clothes and problems to the machine. Use the laundry net or wash them separately.

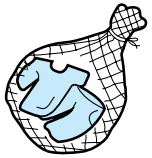

☞ Must put those long stringed clothes, lase-worked clothes, bed cover sheet, wool clothes into a laundry net before washing.
☞ Put delicate clothes in the laundry net.
☞ Use only those commercial laundry net for washing.

Curtains, floating garments or blue jeans shall be pressed not to float on the water.

☞ If they are floated on the water, press Start/Hold button to stop and press them to sock in the water. If the washing goes on with clothes floating on the water, it may cause damages to the clothes and the washing machine as well as unsatisfactory washing result.

CONTROL PANEL

For more details, see control panel of your washing machine.

■ POWER BUTTON

Press this button once to operate.
Press once again to turn the power off.

■ START/HOLD BUTTON

Use to pause and restart the operation.
To change the washing procedure during operation, press this button to stop, and once again to restart after changing the procedure.

■ DELAY START BUTTON

Press this button when delay start washing is needed.

■ COURSE SELECT BUTTON

With every press of this button, the washing course changes;
DIGITAL ➜ BLANKET ➜ ECO+ ➜ SPEEDY ➜ WOOL ➜ DIGITAL

■ SUPER CLEAN BUTTON

Press the button once to perform SUPER CLEAN. Press the button again to perform normal cleaning.

■ FUNCTION SELECT BUTTON

With every press of this button, the fuction changes;

WASH&WASH+&RINSE&SPIN ➜ SOAK&WASH&WSH+&RINSE&SPIN ➜ SOAK&WASH&RINSE&SPIN ➜ WASH ➜ RINSE ➜ SPIN ➜ WASH&RINSE ➜ RINSE&SPIN ➜ WASH&RINSE&SPIN.

■ WATER LEVEL SELECT BUTTON

According to the washload,select the water level;
MEDIUM ➜ HIGH ➜ MAXIMUM ➜ EXTRA LOW ➜ LOW

■ WATER SUPPLY SELECT BUTTON option

As you press this button, the type of water is selected as follows.
COLD ➜ COLD + HOT ➜ HOT ➜ COLD

■ REMAINING TIME INDICATOR LIGHT

The indicator light shows the remaining time (in minutes) of each wash cycle. At the end of the cycle, the power automatically switches off.

HOW TO WASH AUTOMATICALLY DEPENDS ON THE LAUNDRY

Before starting washing, check the following;

- Connect the water supply hose to the water tap. Leave a tap open. Plug the power cord in. Make sure to lay down the drain hose.

SPECIAL NOTES!

Automatic Sensing Function

- At every course (except, wool course) the amount of laundry is automatically sensed and then appropriate water level, washing time, rinsing cycle, and spinning time are automatically selected for automatic washing.
- After the power is on, a course is selected and Start/Hold button is pressed. Then, the washing board starts spinning without water. This action senses how much laundry is in the washing basket, not a machine problem. After this sensing process, water supplies automatically.

Adding Detergent and Softener

- It senses the amount of laundry and indicates the water level and amount of detergent. Then, it starts water supply right away.
- During the water supply, it is possible to open the detergent box and add detergent. However, it is better to press Start/Hold button to stop water supply and add detergent. Close the lid and press Start/Hold button again. This way is much more convenient.
- If the softener is inserted in the softener dispenser, it automatically adds in at the last rinsing cycle.

Put the laundry into the washer and add detergent, too.

- Be careful not to overload. Use right detergent for the fabrics you are washing.

- If the lid is open while running, the washing machine is stopped automatically for safety. (Except, water supply continues while the lid is open.)
- When hot water is selected, both cold and hot water are supplied for the first 20 seconds in order to protect the clothes.
- Possible to control the washing time, rinsing cycle, and spinning time at every course during the washing.

■ DIGITAL COURSE

Selects the best washing course automatically.

1. Press the POWER Button to “ON”.
2. Press the START/HOLD button.

   Water level is selected automatically. Washing rinsing, and spinning follow. If you want to pause, press the START/HOLD button again. You can change the course when paused.
3. Close the lid.

■ BLANKET COURSE

(Big volume laundry like blanket and bed cover sheets)

1. Press the power button to “ON”.
2. Press the course select button once.
3. Press the START/HOLD button.

   Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the START/HOLD button again. You can change the course when paused.
4. Close the lid.

- Fold those big volume laundry (blanket and bed cover sheets) in the following way before adding into the spin basket.
- Do not wash the electric blanket and carpets.
- Get a laundry net for those light and big volume laundry (eg. Cashmeres) because they might rise in the water and get damaged.

■ ECO+ COURSE option

1. Press the power button to “ON”.
2. Press the course select button two times.
3. Press the START/HOLD button.
   Water level is selected automatically. Washing rinsing, and spinning follow. If you want to pause, press the START/HOLD button again. You can change the course when paused.
4. Close the lid.

■ SPEEDY(THOBE) COURSE

If you want to wash those frequently used towels or less dirty laundry time.

Because washing is speedy, it is good for light or less stained laundry.

1. Press the power button to “ON”.
2. Press the course select button three times.
3. Press the START/HOLD button.
   Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the START/HOLD button again. You can change the course when paused.
4. Close the lid.

■ WOOL COURSE

Washable sweater, cardigan, delicate clothes etc.

1. Press the power button to “ON”.
2. Press the course select four times.
3. Press the START/HOLD button.
   Washing, rinsing, and spinning follow. If you want to pause, press the START/HOLD button again. You can change the course when paused.
4. Close the lid.

CAUTION…

- Do not use water above 30°C For WOOL washing.
- Refer to the tag attached on the clothes for washing information.
- Fasten buttons and turn inside out before washing.
- Use the detergent indicated in the laundry.
- When the degree of dirt is extreme, soak the laundry in warm water for about 10 minutes before pressing the WOOL course button in order to enhance washing efficiency.

■ DELAY START

How to reserve washing?
Select this course when you have to go out or do something else.

1. Press the power button to “ON”.
2. Press the course select button.
3. Press the DELAY START button once.
   You may change the delay start time with use the DEALY START button. (from 3 hours to 18 hours)
4. Press the START/HOLD button and put the proper amount of detergent into tub.
5. Close the lid.
   The washing finishes by the time you reserved.

Add detergent and softener in proportion to the water level. Then, close the lid.

- Must add the detergent in the detergent box.
- If the detergent is spread on the laundry directly, some clothes may get discolored as the start delays.
- If the Delay Start needs to be canceled, press the power button.
- The reserved finish time may be changed depends on the water pressure.

■ SUPER CLEAN option

Use for cleaner washing.

1. Press the power button to "ON".
2. Press the SUPER CLEAN button.
3. Press the START/HOLD button and put the proper amount of detergent into tub.
   - Water level is selected automatically.
   - Water level is only selected MAXIMUM~MEDIUM.
4. Close the lid.
   - The washing finishes by the time you reserved.

■ CLEANING THE TUB

1. Press the POWER button.
2. Press the COURSE button to select the BLANKET course.
3. Press the FUNCTION button to select SOAK.
   You can select the water supply or temperature (hot/cold).
4. Press the WATER LEVEL button to select MAXIMUM.
5. Press the START/HOLD button.
6. Add a dedicated detergent and close the lid.

- Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
- When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.

MANUAL FUNCTIONS

Each washing course changes manually.
Ex) If you want to wash in the speedy course : Power - Select speedy course - Wash - Start/Hold button

Note! Blanket course includes SOAK Function basically.

 once	**WASH+ FUNCTION** (If you want to add more wash-time, use to this wash+ function) Press the POWER button. Select the course(Press the course button). ➜ BLANKET, ECO+, SPEEDY, WOOL Press the FUNCTION button once. Press the START/HOLD button once. Water level is selected automatically. Washing,rinsing, and spinning follow.
 twice	**SOAK & WASH+ FUNCTION** Press the POWER button. Select the course(Press the course button). ➜ BLANKET, ECO+, SPEEDY, WOOL Press the FUNCTION button twice. Press the START/HOLD button once. Water level is selected automatically. Soaking, Washing, rinsing, and spinning follow.
 three times	**SOAK FUNCTION** Press the POWER button. Select the course(Press the course button). ➜ BLANKET, ECO+, SPEEDY, WOOL Press the FUNCTION button three times. Press the START/HOLD button once. Water level is selected automatically. Soaking, Washing, rinsing, and spinning follow.
four times	**WASH ONLY** Press the POWER button. Press the FUNCTION SELECT button four times. Press the START/HOLD button once. When the FUNCTION button is pressed during washing, the wash time can be changed to between 3 and 25 minutes in duration.

five times	**RINSE ONLY** Press the FUNCTION button five times. Press the START/HOLD button once. When the FUNCTION button is pressed during rinsing, the rinse times can be changed to between 1 to 5 times in duration.
six times	**SPIN ONLY** Press the FUNCTION button six times. Press the START/HOLD button once. When the FUNCTION button is pressed during spinning, the spin time can be changed to from 1 to 7 minutes.
seven times	**WASH AND RINSE** Press the FUNCTION button seven times. Press the START/HOLD button once. When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 to 5 times in duration.
eight times	**RINSE AND SPIN** Press the FUNCTION button eight times. Press the START/HOLD button once. Rinsing and spin drying follow. When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 and 5 times in duration.

INSTALLATION & MAINTENANCE

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

■ ENVIRONMENT

Leave some space

Maintain at least 10cm between the washer and the wall.

Place the washer on a sturdy flat surface.

If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°)

Adjust the legs for even placement.

Never install the washer near water.

Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.

Avoid direct sunlight or heaters.

As plastic an electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

■ LEVELLING

- If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.

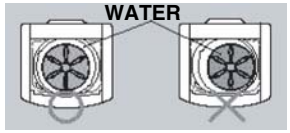

- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet

■ CONNECTING THE WATER SUPPLY HOSE

1. Remove the adaptor from the water supply hose.



2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5mm between them.



3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part(b) following the arrow and put (a) and (b) together.



4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.

option



5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer.

Screw the hose clockwise all the way in.

option

☞ If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown.

option



Note!

After completing connection, if water leaks from the hose, then repeat the same steps.

Use the most conventional type of faucet for water supply.

In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

■ ASSEMBLING THE RAT PROTECTION PANEL option

Tilt the washer a little and lift up the panel until it clicks, finally fix the panel with screw to the base as shown in the figure.

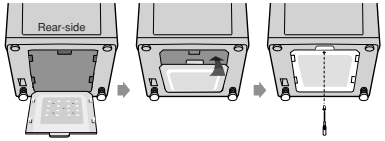

1. Insert the sound absorbing panel to the assembling hole on back side to the end



2. If you have difficulty inserting the panel lift up the washer a little and insert it.

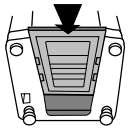

■ HOW TO CONNECT THE DRAIN HOSE option

☞ IN CASE OF PUMP-DRAINED WASHER

Take out the cap-hose and connect the outlet-hose.

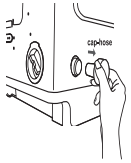

Be sure to join tightly the drain hose into the drain-outlet on the back of the machine.



Be sure to join tightly the drain hose into the drain-outlet on the side of the machine.

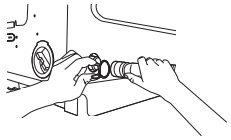

Install the drain hose in the position of about 90~100cm above the ground.



☞ IN CASE OF GENERAL WASHER

1. After pressing the joint ring, insert to the drain hose.

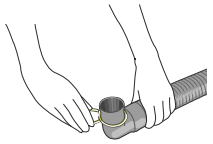

2. After directing the drain hose to a drain, join to the drain-outlet of the washing machine.

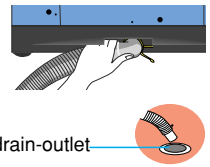

3. Be sure to join them tightly by pressing the joint ring and pushing it into the drain-outlet.
- The length of drain hose is adjustable so that you can extend the length appropriately.



HOW TO CHANGE THE DRAIN HOSE DIRECTION

- The handle of joint ring is pressed to pull out the drain hose. Change the direction of the drain hose and follow the above guideline again.



CAUTIONS WHEN INSERTING THE DRAIN HOSE

1. Don't exceed more than 3m when the drain hose is used by connecting whth other hoses.



2. Be careful to drain water out at the end of the drain hose.



3. The doorsill shoudn't be more than 5cm.



4. Don't install the drain hose underneath the wash machine.

■ HOW TO ADD THE FABRIC SOFTENER option

- When a proper amount (one time does) of fabric softener is stored in the softener inlet, it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener. Dispenser for a long time. Because softner became stiff.

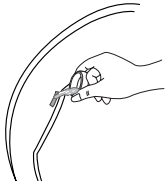

■ HOW TO PUT THE DETERGENT IN option

1. Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.
2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.

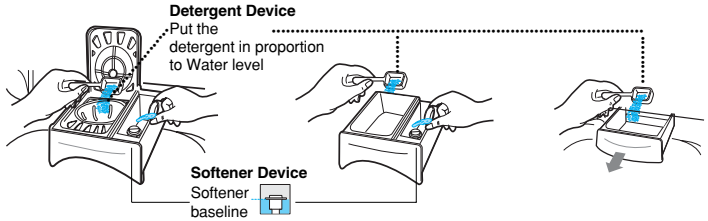

CAUTION : If softener is stored over the above base line, it may flow down at any time.

■ WATER SUPPLY CONNECTOR FILTER



1. Pull out the filter and wash well.

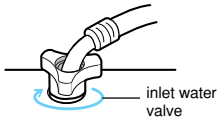

2. Pull in the filter and connect the hose to the inlet water valve tightly.

3. Check if there is a leakage.
   Note to tighten up the connector.

■ CLEANING THE FILTER option

Clean the filter net often to keep the washer clean.

1. Push the upper part of the Magic filter and pull in.



2. Open the cover as shown in the figure.



3. Clean the Magic filter.

4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with “click” sound.

1. Push up and pull out the filter net.



2. Remove the collected lint from the filter net.

3. Clean the filter net.

4. Pull down the filter net.



■ HOW TO CLEAN THE PUMP FILTER option

1. Place a rag under the washer filter not to wet the floor.
2. Rotate the filter counterclockwise and pull out the filter.
3. Remove dirts and rotate the filter clockwise until it locks in position.

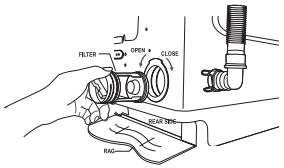

TROUBLESHOOTING

➢ Washing machine won't work

Is the water tap opened?
Is the washer plugged in?
Is the power cut off?
Is there enough water?

➢ Water dose not drain



Is the drain hose down?(No pump)
Is the drain hose frozen?
Is the drain hose clogged?
If the water dose not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E".

➢ Water is not supplied

Is the water tap opened?
Is the water cut off?
Is the water supply hose or hose connection clogged?
Is the water tap frozen?
If water is not supplied in 1 hour, a buzzer will sound, and the remaining time indicator will show "4E".

➢ Spinning does not work

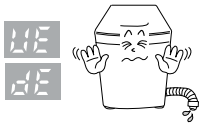

Is the laundry spread out evenly in the washer?
In the washer set on a sturdy flat surface?

➢ Water is overflowed

Restart after spinning.
If the error sign still indicates, call agency.

WASHING MACHINE WON'T WORK?

The power is cut off.

Check 1> Is the electric voltage normal?

Check 2> Is the washer plugged in? Plug in the electric cord.

➜ Water does not drain.

Check 3> Is the drain hose down? Put the drain hose down.

Check 4> Is the drain hose folded? Unfold the drain hose.

Check 5> Is the drain hose outlet clogged? Remove the waste cleanly.

Washing machine won't work.

Check 1> Is the washer lid open?

➜ Close the lid.

Check 2> Is the Hold button on?

➜ Press the Start/Hold button one more time and check if the washer starts.

Check 3> Is enough water filled to the water level?

➜ If the water pressure is low, it takes a long time to start washing.

Check 4> Is the faucet closed?

➜ Open the faucet to supply water.

If the drain hose and spin basket are frozen, do as follows.

- Add hot water to the frozen water tap and remove the drain hose. Soak into hot water.
- Pour hot water into the spin basket for about 10 minutes.
- Put a hot water towel on the drain hose connector.
- If the drain hose defrosts, connect again and check for proper water draining.

The water drains out immediately.

- The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again.

WASHING MACHINE WON'T WORK? (Continue)

The water leaks at the water supply hose connector.

Check 1> If the faucet connecting part is loose, water may leak.

➜ Repeat the assembling steps again.
(Refer to "Connecting the water supply hose")

Check 2> Check if the rubber packing of water supply hose is in the right position.

➜ Screw tightly again.

Check 3> Is the water supply hose folded?

➜ Unfold the hose.

Check 4> If the water supply is too strong, water may leak.

➜ Close the faucet a little.

Check 5> Is water leaking from the faucet itself?

➜ Fix the faucet. Water is not supplied.

Check 6> Did you press the Start/Hold button after selecting the water supply?

➜ If the Start/Hold button is not pressed, water is not supplied. Press the Start/Hold button.

Check 7> Is the faucet closed?

➜ Turn on the faucet.

Check 8> Is the filter net at the water supply hose connector clogged with dirty matters?

➜ Clean the filter net by brushing with a toothbrush.

Check 9> Is the water supply cut off?

➜ If the water supply is suspended, turn off the faucet and power off.

Spinning makes loud noises and vibrations.

Check 1> Check if the laundry is spread evenly in the washer.

➜ Spread out the laundry evenly and start again.

Check 2> Check if the washing machine levels on a sturdy flat floor.

➜ Set the machine at level.

Check 3> Is the handle for leveling legs loose?

➜ Adjust the legs on the feet for leveling.

Check 4> Is around the washing machine filled with unnecessary stuffs?

➜ Remove those unnecessary things away from the wash machine.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

SPECIFICATIONS

WA95F3/WA90F3

DIMENSIONS (mm)		W573xD632xH903	STANDARD WATER LEVEL	MAXIMUM	55 *l*
				HIGH	49 *l*
WEIGHT		33 kg		MEDIUM	43 *l*
				LOW	35 *l*
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg • f/cm^2)		E/LOW	27 *l*
			WATER USAGE		140 *l*
WASHING TYPE		Stirring Type	POWER SUPPLY		127V/50~60Hz, 230~240V/50Hz, 220V/50~60Hz
MOTOR INPUT	WASHING	330W	PLUSATOR ROTATING SPEED		113 rpm
	SPINNING	246W	SPINNING TUB ROTATING SPEED		660 rpm
MOTOR MAX INPUT	WASHING	330W	RATING TIME	WASHING	Continue
	SPINNING			SPINNING	15 Minutes

For operating VOLTAGE and FREQUENCY, see the LABEL-RATING on the back of washing machine.

جهاز الغسالة

إرشادات المالك

WA90F3/WA95F3

الميزات ٢
احتفظ بالحوض نظيفًا ٢
إرشادات من أجل السلامة ٣
وصف الأجزاء ٤
التحقق من السلامة قبل الغسيل والاعتناء بالملابس ٥
لوحة التحكم ٦
يعتمد الغسيل بشكل تلقائي على نوعية الغسيل ٧
وظائف يدوية ٩
التثبيت والصيانة ١٠
البيئة ١٠
الاستواء ١٠
توصيل خرطوم التزويد بالماء ١٠
تركيب لوحة الحماية من الفئران ١١
كيفية توصيل خرطوم التصريف ١١
كيفية إضافة ملين الأقمشة ١٢
كيفية وضع المسحوق ١٢
مصفاة وصلة تزويد الماء ١٢
تنظيف المصفاة ١٢
كيفية تنظيف مصفاة المضخة ١٢
استكشاف المشاكل وحلها ١٣
هل توقفت الغسالة عن العمل؟ ١٣
المواصفات ١٤

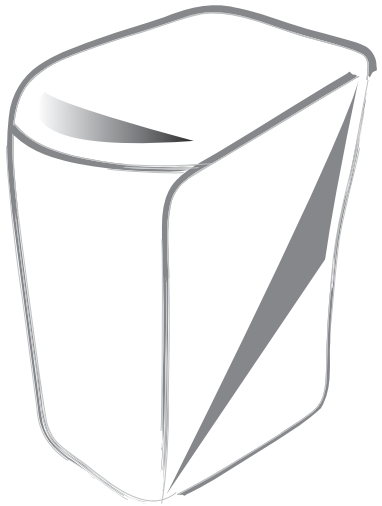

- الرجاء قراءة هذا الدليل قبل الاستخدام وملاحظة كيفية الاستخدام بالأسلوب الملائم.
  الرجاء الحفاظ على هذا الدليل.
  وإلا، فستقوم بشرائه منفرداً.
- دليل المستخدم مخصص للاستخدام العام.
  يعتمد استخدام دليل المستخدم على طراز الغسالة.

قم بتسجيل المنتج الخاص بك على موقع
www.samsung.com/global/register

رقم الكود: DC68-02040Q-AR

الميزات

جسم فيبر مقاوم للصدأ

• مصنوع من المعدن القوي بجسم فيبر مقاوم للصدأ ويتحمل الرطوبة لمدة طويلة.

إعادة التشغيل التلقائي

• يتم تشغيل الجهاز تلقائياً بعد حدوث انقطاع للتيار الكهربي.

توفير الطاقة

• الدورة «اقتصادي +»، وهي عبارة عن دورة غسيل توفر الطاقة وتقلل زمن الغسيل للملابس العرضة للاتساخ ويتم غسلها بشكل متكرر.

التحكم الرقمي

تعمل ميزة التحكم الرقمي من حلال استخدام أفضل دورة غسيل عن طريق تحسس حمل الغسيل مثل الذكاء الاصطناعي.

النافذة الشفافة

"النافذة الشفافة" هي الفكرة الجديدة التي تمكن المستخدمين من إشباع فضولهم بمشاهدة ما بداخل الغسالة أثناء تشغيلها.
يمكن التحقق من تقدم عملية الغسيل التي تجري داخل الغسالة أثناء التشغيل بالنظر من خلال النافذة الشفافة.

المضخة (option)

تساعد "المضخة" الماء ومسحوق الغسيل على تخلل النسيج بشكل فعال أثناء عملية الدفع الشديد للماء لتنظيف الملابس الكبيرة والثقيلة وعملية الدفع البسيط للماء لتنظيف كافة الملابس الرقيقة والمحافظة عليها من البلي والتمزق.

تدفق الماء

يندفع الماء المضغوط من أسفل فتحات المضخة بقوة في الحوض، دافعاً أية ملابس طافية تحت سطح الماء.
عملية "تدفق الماء" هي التي تمكن الغسالة من غسيل كميات كبيرة وثقيلة من الملابس مثل الجينز والبطاطين بشكل فعال.

المصفاة الفعالة

تضمن لك هذه "المصفاة" الفعالة الفريدة تجميع كافة النسالات الموجودة داخل حوض الغسيل مما يرفع كفاءة عملية التصفية للحصول على نتائج فعالة لعملية الغسيل.

موزع ملين الأقمشة (option)

يخرج "موزع ملين الأقمشة" الملين في الوقت الملائم عند إجراء آخر عملية للشطف.

النظافة القصوى

يضبط نظام "النظافة القصوى" مستوى الماء على ٥ خطوات وذلك لتحسين كفاءة مسحوق الغسيل بواسطة ضبط كثافته على الكثافة العادية.

وظيفة التأمين ضد عبث الأطفال

يساعد هذا الجهاز لحماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة.
كيفية تشغيل وظيفة "التأمين ضد عبث الأطفال":

• اضغط على الزر "الطاقة" (Power) للانتقال إلى وضع الغسيل الأولي.
• بواسطة الضغط على الزر "تشغيل/توقف" (Start/Hold)، تبدأ عملية الغسيل وفي حالة الاحتياج إلى وظيفة "التأمين ضد عبث الأطفال" أثناء الغسيل
• اضغط على الزرين "مستوى الماء" (WATER LEVEL) و"الوظيفة" (FUNCTION) في وقت واحد لبدء عمل الوظيفة.

(ملاحظة: لا يمكنك تشغيل الوظيفة دون الضغط على الزر "الطاقة" (Power).)
لإلغاء تأمين وظيفة «التأمين ضد عبث الأطفال»:

• في حالة برمجة وظيفة «التأمين ضد عبث الأطفال»، اضغط على كل من الزرين «مستوى الماء» (WATER LEVEL) و "الوظيفة" (FUNCTION) معاً.

※ احتفظ بالحوض نظيفًا

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتريا العالقة في الهواء بأنواعها المختلفة بالحوض وتكون أجزاء متسخة سوداء (فطريات) مما يتسبب في إصابة الشخص. للاحتفاظ بالحوض نظيف وصحي دائمًا، ينصح بقراءة الجزء الخاص بـ «تنظيف الحوض» أعلاه واستخدام المواد المطهرة أو المنظفة الموصى بها فقط لتنظيف الحوض بانتظام مرة واحدة على الأقل كل شهر إلى ثلاث شهور.

إرشادات من أجل السلامة

الرجاء ملاحظة أن احتياطات السلامة التالية تهدف إلى تجنب التعرض للأخطار أو الأضرار غير المتوقعة وذلك عن طريق المساعدة في الاستخدام الملائم من أجل السلامة.

عند استخدام الماء الساخن في الغسيل، الرجاء التأكد من ألا تتجاوز درجة حرارة الماء لا تتعدى ٥٠ درجة مئوية.

- قد تتعرض الأجزاء البلاستيكية للتشوه أو للتلف، وقد تحدث صدمات كهربائية أو حريق.

تحذير

قد تحدث إصابات بالغة أو حوادث مهلكة في حالة خرق هذه التعليمات.

- في حالة تلف قابس الجهاز (سلك التيار الكهربي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- لا تنزع سلك التيار أو تلمسه بأيد رطبة.
  - قد تحدث صدمة كهربائية أو حريق.
- لا تحاول ثني سلك التيار بالقوة أو الضغط عليه بأشياء ثقيلة.
  - قد تحدث صدمة كهربائية أو حريق.
- لا تضع الغسالة بالقرب من أدوات كهربائية ولا تضع شمعة أو سجائر فوق الغسالة.
  - قد يحدث حريق.
- لا تضع يديك أو أي أدوات معدنية أسفل الغسالة أثناء التشغيل.
  - قد تتعرض للأذى عن طريق لوح التنشيف الموجود أسفل الغسالة.
- ابتعد عن الغسالة عندما يكون قاع الغسالة مغمور بالماء.
  - قد تحدث صعقة كهربائية. الرجاء الانتظار حتى يتم تصريف الماء بالكامل.
- لا تضع ملابس ملطخة بالجازولين أو البنزين أو الكحول في الغسالة، واحتفظ بتلك الملابس بعيداً عن الغسالة.
  - قد يحدث انفجار أو حريق.
- أثناء التنشيف، لا تضع يديك في حوض التنشيف..
  - قد تتعرض يداك للأذى. في حالة عدم توقف الغسالة عن العمل في غضون ١٥ ثانية بعد قيامك بفتح الغطاء، اتصل بوكيل الصيانة على الفور.
- هذا الجهاز غير مخصص لاستخدام الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكلٍ آمن.
  يجب مراقبة الأطفال الصغار لضمان عدم عبثهم بجهاز الغسالة.
- يجب أن يتم توصيل هذا الجهاز من خلال مأخذ قوي الاحتمال لضمان الاستهلاك الصحيح للطاقة.
- يجب وضع الجهاز بحيث يسهل الوصول إلى مأخذ التوصيل بعد تركيبه.
- لا تتوفر قطع غيار للاستبدال داخل الغسالة يمكن للمستخدم استخدامها. استعن بفني صيانة مؤهل للقيام بأعمال الصيانة.
  - وإلا فإنه قد تحدث خطأ ميكانيكي، أو صعق كهربائي، أو حرائق، أو تلف.
  - إن الضمان الخاص بالمنتج لا يتضمن المشاكل الناجمة عن فك المنتج.
- لا تستخدم هذا المنتج للأغراض التجارية.
- الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

تنبيهك

قد تتعرض لإصابات خفيفة أو أضرار طفيفة في حالة خرق هذه الإرشادات.

- لا تقم بتثبيت الغسالة في منطقة رطبة أو خارج المنزل حيث يتساقط المطر أو الجليد.
  - قد تحدث صدمة كهربائية أو حريق.
- الرجاء فصل سلك التيار الكهربائي عند عدم استخدامه.
  - قد تحدث صدمة كهربائية أو حريق.
- في حالة وجود أتربة أو ماء على قابس التيار الكهربائي والجزء المتصل به، الرجاء إزالته بالكامل..
  - قد تحدث صدمة كهربائية أو حريق.
- لا تجعل أطفالك ينظرون داخل الغسالة.
  - إذا سقط طفلك في الغسالة، قد تكون حياته عرضة للخطر.
- قم بتهوية القابس على الفور دون لمسه في حالة تسرب الغاز.
  - قد تحدث صدمة كهربائية أو حريق في حالة اشتعاله.
- إذا أحدثت الغسالة صوتاً، أو أخرجت رائحة غير عادية، أو دخان قم بفصلها بسرعة واتصل بوكيل الصيانة.
  - قد تحدث صدمة كهربائية أو حريق.
- لا ترش الماء على أجزاء الغسالة مباشرة، عند تنظيفها.
  - قد يؤثر ذلك على عمر الغسالة.
    قد تحدث صدمة كهربائية أو حريق.
- لا تستخدم عدة أدوات في آن واحد بمَخرج التيار الكهربائي..
  - قد يحدث حريقاً بسبب الحرارة الزائدة.
- لا تضغط الزر بمثقاب أو بدبوس.
  - قد تحدث صدمة كهربائية أو حريق.
- استخدم أطقم خراطيم جديدة، حيث لا يجب إعادة استخدام الخراطيم القديمة.
- في حالة تلف السلك المستخدم حالياً، يجب استبداله بمعرفة الشركة المصنعة أو مركز الصيانة أو أي شخص مخول وذلك لتجنب التعرض لأية مخاطر.
- وصل سلك الأرضي باللوحة الأساسية وخبئه تحت عمق ٢٥ سم تقريباً تحت الأرض، أو يمكنك كبديل توصيل سلك الأرضي بقضيب أو مقبس طاقة لتصريف الأرضي. يحظر توصيل السلك بسلك هاتف أو قضيب البرق أو أنبوب توصيل غاز. option

وصف الأجزاء

دليل المستخدم مخصص للاستخدام العام.
يعتمد استخدام دليل المستخدم على طراز الغسالة.

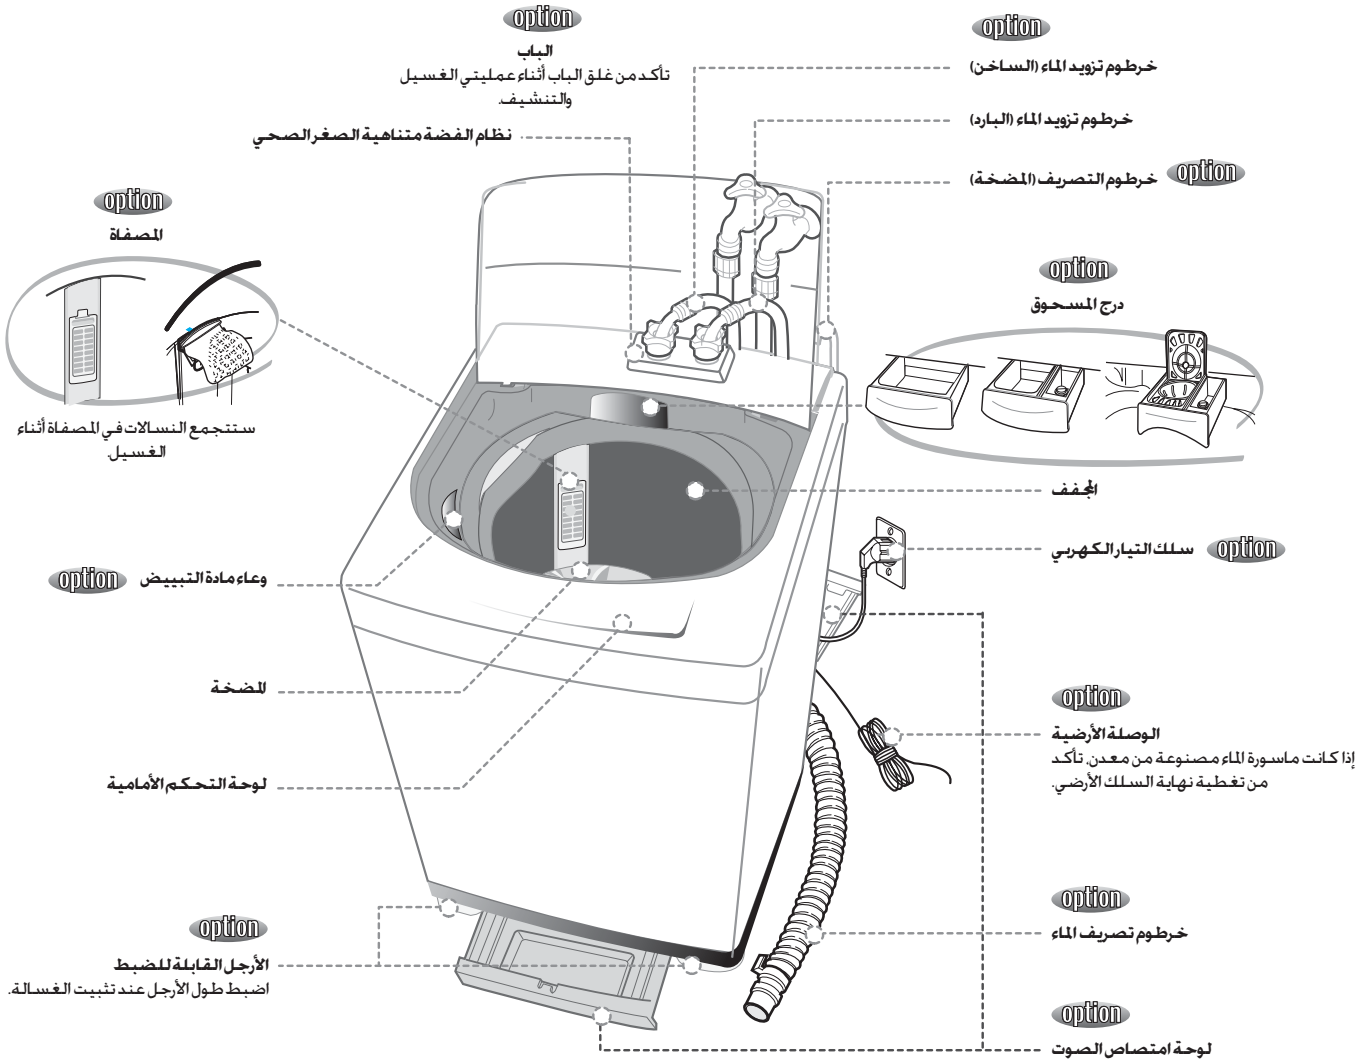

التحقق من السلامة قبل الغسيل والاعتناء بالملابس

يجب اتباع تعليمات الفحص لتجنب المشاكل التي قد تواجهها أثناء استخدام جهاز الغسالة أو التلفيات التي قد تصيب الملابس.

- إذا حدثت المشاكل المذكورة أدناه بسبب أخطاء من العميل، يتم تحصيل مصاريف خدمة منفصلة.

تعليمات الفحص المتبعة قبل بدء الغسيل

تحقق مما إذا كانت الملابس تبهت.

- أضف المنظف السائل إلى منشفة بيضاء وقطعة الملابس التي لا يمكنك ملاحظة الاتساخ بها بوضوح، ثم قم بدعكها معاً بقوة. تحقق مما إذا كان اللون قد انتقل إلى المنشفة أم لا.
- تعامل بحذر مع الوشاحات والملابس المستوردة حيث أنها تفقد لونها بسهولة.
- تحقق مما إذا كان يوجد أية بقع أو أوساخ جزئية بالملابس.
- في حالة العثور على بقع، استخدم منشفة رطبة عليها مسحوق غسيل وادعكها في اتجاه واحد.
- قبل الغسيل، تتم معالجة الأساور، والياقات، وثنيات الفساتين والجيوب بالتنظيف بفرشاة عليها مسحوق.

يتم تعديل هيئة الأقمشة المجدولة والمصنوعة من الصوف باستخدام خيوط خاصة قبل عملية الغسيل. تتم إزالة هذه الخيوط عقب تجفيف الملابس.

الملابس غير القابلة للغسيل

الملابس التي تتأثر بسهولة حتى بالنقع في الماء.

- حتى بالنقع في الماء، يمكن أن يحدث تغيير في أربطة العنق والصدريات والسترات والبدل والمعاطف فقد تنكمش هذه الملابس أو يتغير لونها الخارجي وذلك لأن معظمها مصنوع من الرايون والبولينوسيك والألياف ومشتقاتهم من الألياف المخلطة.
- يمكن أن تتغير ألوان الأقمشة المعالجة أو المنقوشة أو الصناعية حتى من خلال النقع في الماء.
- وتعتبر الأقمشة المصنوعة من القطن والصوف والحرير المعالج والمنتجات المصنوعة من الجلد والأدوات المصنوعة من الجلود والملابس المزينة بالجلد وأدوات الزينة الخاصة به من السهل أن تفقد لونها.
- لا تغسل تلك الملابس دون معرفة إرشادات الاستخدام أو المنتج التي توضح كيفية التعامل معه.

حول مسحوق الغسيل

- عندما يكون مسحوق الغسيل غير قابل للذوبان بشكل جيد، استخدم الماء الدافئ (حوالي ٤٠ درجة مئوية) لإذابة المسحوق.

تنبيه

- استخدم كمية ملائمة من مسحوق الغسيل.
- حتى إذا تم الإفراط في استخدام مسحوق الغسيل، فلن تختلف النتيجة بعد الغسيل. فقد يؤدي ذلك إلى تلف الملابس لعدم شطفها بدرجة كافية.
- قد تتسبب مواد التبييض في إتلاف الملابس حيث أنها مواد شديدة القلوية.
- اشطف الملابس بالشكل الكافي حيث أن بقاء المسحوق عليها يسبب روائح كريهة.
- إذا تم الإفراط في استخدام المسحوق أو الماء البارد، فلن يذوب المسحوق بالكامل وسيظل في الملابس أو الخرطوم أو المجفف مما يسبب تلوثها.
- في حالة وجود غسيل متبقي، يجب وضع المسحوق في درج المسحوق.

قد يؤدي انتشار مساحيق البودرة في الغسيل بشكل مباشر إلى تلطخ ألوانها.

العناية بالملابس قبل الغسيل

- يجب اتباع تعليمات الفحص لتجنب المشاكل التي قد تواجهها أثناء استخدام جهاز الغسالة أو التلفيات التي قد تصيب الملابس.
- إذا حدثت المشاكل المذكورة أدناه بسبب أخطاء من العميل، يتم تحصيل مصاريف خدمة منفصلة.

أخرج المتعلقات الشخصية من الجيوب.



- تنبيه، افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة.

حيث أنها تسبب ضوضاء ومشاكل للغسالة. يجب فحص الجيوب.

إذا تركت السوستة مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف المجفف. يجب غلق السوستة وتثبيتها بخيط قبل الغسيل.

- إذا كان سوستة الجينز أو الزي الخاص بالعمل مصنوعة من المعدن، يجب غلقها قبل الغسيل.
- اغسل السترات الشتوية، والزي الخاص بالعمل، وملاءات الأسّرة، والجينز كل على حدة.

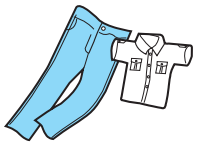

- اطو الملابس بشكل جيد في المجفف. يجب إزالة خطافات الستائر قبل الغسيل.
- اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل الغسيل.
- كن حذراً في التعامل مع التطريزات المعدنية حيث أنها تتسبب في تلفيات كبيرة أثناء الغسيل.
- قد تتشابك الملابس التي تحتوي على خيوط طويلة مع الملابس الأخرى. يجب تثبيت الخيوط قبل الغسيل.

- قد يتم خلع الأجزاء المعدنية الموجودة في الصدريات مما يسبب تلفاً للملابس الأخرى أو للمجفف. يجب استخدام شبكة الغسيل الاقتصادي لغسيل الصدريات. (استخدم شبكة الغسيل المصنوعة من الشبك الجيد.)

غير مسموح بوضع الملابس المقاومة للماء (لباس التزحلق على الجليد وحفاضات الأطفال والدواسات) في الغسيل.

- لا يجب غسيل الملاءات المقاومة للماء أو المنسوجات غير القابلة لتسرب الماء، ولا يجب تجفيفها أو وضعها في المجفف. قد يحدث الغسيل انفجاراً مسبباً اهتزازات تلحق ضرراً بالشخص الذي يقف بجوار الغسالة كما تلحق ضرراً بها وبالأرضية التي قد تتشقق فضلاً عن الملابس. (أمثلة على ذلك النوع من الغسيل حفاضات الأطفال والملابس المقاومة للماء ومعاطف المطر وغطاء المظلة وملابس التزحلق على الجليد وغطاء السيارة وحقائب النوم.)



تنبيهات أثناء التنشيف

- تنشيف الملابس العادية
  - يتم تصريف الماء الناتج من الملابس من خلال الفتحات الموجودة في المجفف.
- تنشيف الملابس والأنسجة المقاومة للماء
  - حتى إذا كان المجفف يعمل، لا يمكن تصريف الماء من الملابس والأنسجة المقاومة للماء. وعلى ذلك، يتجمع الماء في جانب واحد مما يسبب اهتزازات عالية. حتى إذا كان المجفف يعمل بأقصى سرعة، يظل الماء لا يمكن تصريفه من خلال الملابس والأنسجة المقاومة للماء. وكنتيجة لذلك، ترتفع الملابس إلى أعلى وتندفع بشكل مفاجيء عند حدوث اهتزاز شديد.

انفض الأوساخ والأتربة عن الملابس.

☜ يؤدي دعك الأوساخ والأتربة المتراكمة على الملابس الرقيقة إلى تعريضها للتلف والحصول على نتائج غير مرضية بعد الغسيل.

لحماية جلد الطفل

☜ اغسل الحفاضات وما يرتديه الأطفال (ملابس الأطفال، والمناشف، إلى آخره) على حدة. قد تتسرب الأوساخ إلى ملابس الأطفال من ملابس الكبار إذا تم غسلها معاً.

اغسل الجوارب البيضاء والأكمام والياقات مسبقاً قبل دورة الغسيل الأساسية.

☜ يمكن استخدام المنظفات السائلة والمساحيق.

☜ لا تستخدم الصابون. قد يتسبب ذلك في اتساخ المجفف.

اقلب الملابس المزغبة على ظهرها قبل الغسيل.

☜ إذا كانت الملابس بها أوساخ خارجية، يجب فصلها قبل الغسيل. حيث قد تعلق هذه الأوساخ (الأوساخ والخيوط) بالملابس الأخرى.



☜ اغسل الملابس السوداء والمناشف القطنية كل على حدة. إذا تم غسلها معاً، قد تعلق الأوساخ بالمناشف. افحص الملابس قبل الغسيل.

قد تسبب غسيل الملابس ذات الأحجام الكبيرة والأوزان الخفيفة (على سبيل المثال الملابس المزينة بالدانتيل، والملابس النسائية، والمنسوجات المصنوعة من النيلون، إلى آخره) في إلحاق الضرر بالملابس نفسها كما قد تتسبب في مشاكل لجهاز الغسالة. استخدم شبكة الغسيل أو اغسلها على حدة.

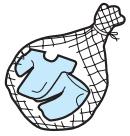

☜ يجب وضع الملابس المزينة بالخيوط، والدانتيل، وملاءات الأسّرة، والملابس الصوفية في شبكة غسيل قبل وضعها في الغسالة.

☜ ضع الملابس الخفيفة في شبكة غسيل.

☜ استخدم شبكة الغسيل الاقتصادية في عملية الغسيل.

يجب ضغط الستائر والملابس العائمة أو الجينز حتى لا تطفو فوق سطح الماء.

☜ في حالة الطفو فوق سطح الماء، اضغط على الزر "تشغيل/توقف" (Start/Hold) لإيقاف التشغيل ثم اضغط تلك الملابس حتى يغمرها الماء. إذا استمرت عملية الغسيل والملابس طافية فوق سطح الماء، قد يتسبب ذلك في إلحاق الضرر بالملابس والغسالة علاوة على الحصول على نتائج غير مرضية بعد الغسيل.

لوحة التحكم

للحصول على مزيد من التفاصيل، راجع لوحة التحكم الخاصة بالغسالة.

POWER

AUTO OFF

■ **الزر "الطاقة" (POWER)**

اضغط هذا الزر مرة واحدة للتشغيل.
اضغط هذا الزر مرة أخرى لإيقاف التشغيل.

START HOLD

AUTO RESTART

■ **الزر "تشغيل/توقف" (START/HOLD)**

استخدم هذا الزر للإيقاف المؤقت لعملية التشغيل وإعادة التشغيل.
لتغيير أحد إجراءات الغسيل أثناء عملية التشغيل، اضغط هذا الزر للإيقاف، ومرة أخرى لإعادة التشغيل بعد تغيير الإجراء.

DELAY START

■ **الزر "تأجيل التشغيل" (DELAY START)**

اضغط هذا الزر عند الرغبة في تأجيل التشغيل.

COURSE

■ **زر تحديد "الدوران" (COURSE)**

بالضغط كل مرة على هذا الزر، يتغير دورة الغسيل:
رقمي ← بطانية ← اقتصادي+ ← سريع ← صوف ← رقمي

SUPER CLEAN

■ **زر "التنظيف المتميز" (SUPER CLEAN)**

اضغط الزر مرة واحدة لتشغيل «التنظيف المتميز». اضغط الزر مرة أخرى لتشغيل التنظيف العادي.

FUNCION

■ **زر "اختيار الوظيفة"**

بالضغط كل مرة على هذا الزر، تتغير الوظيفة:
غسيل وغسيل+شطف وتجفيف ← نقع وغسيل وغسيل+شطف وتجفيف ← نقع وغسيل وشطف وتجفيف ← غسيل ← شطف ← تجفيف ← غسيل وشطف ← شطف وتجفيف ← غسيل وشطف وتجفيف

WATER LEVEL

■ **زر تحديد "مستوى الماء" (WATER LEVEL)**

بناءً على حجم الغسيل، حدد مستوى الماء:
متوسط ← عالي ← الأقصى ← حد أدنى ← منخفض

WATER SUPPLY

■ **زر تحديد "تزويد الماء" (WATER SUPPLY)** option

عند قيامك بالضغط على هذا الزر، يتم تحديد نوع الماء كما يلي.
بارد ← بارد + ساخن ← ساخن ← بارد

■ **لمبة مؤشر الوقت المتبقي**

تظهر لمبة المؤشر الوقت المتبقي لكل دورة غسيل (بالدقائق).
في نهاية الدورة، يتم إيقاف التشغيل بشكل تلقائي.

يعتمد الغسيل بشكل تلقائي على نوعية الغسيل

قبل بدء عملية الغسيل، تحقق مما يلي:

- صل خرطوم تزويد الماء إلى الصنبور. اترك الصنبور مفتوحاً. قم بتوصيل سلك التيار الكهربائي. تأكد من أن اتجاه خرطوم التصريف لأسفل.

ملاحظات خاصة!

وظيفة التحسس التلقائي

- في كل دورة (ما عدا دورة الصوف) يقوم جهاز الغسالة بتحسس كم الغسيل تلقائياً ومن ثم يتم تحديد مستوى الماء الملائم ووقت الغسيل ودورة الشطف ووقت التنشيف تلقائيًا للغسيل التلقائي.
- عقب التشغيل، يتم تحديد الدورة ويتم ضغط الزر "تشغيل/توقف" (Start/Hold)، ثم تبدأ لوحة الغسيل في الدوران بدون ماء. يتعرف هذا الإجراء على حجم الغسيل الموجود في حوض الغسيل، وهو ليس خللاً في أداء الجهاز. بعد عملية التحسس هذه، يتم تزويد الماء تلقائيًا.

إضافة مسحوق الغسيل وملين الأقمشة

- يتعرف هذا الإجراء على كم الغسيل ويشير إلى مستوى الماء وكمية المسحوق. ثم يبدأ تزويد الماء في الحال.
- أثناء عملية تزويد الماء، يمكن فتح درج المسحوق وإضافته. على الرغم من ذلك، من الأفضل ضغط الزر "تشغيل/توقف" (Start/Hold) لإيقاف تزويد الماء وإضافة المسحوق. أغلق الباب واضغط الزر "تشغيل/توقف" (Start/Hold) مرة أخرى. تعد هذه الطريقة من أنسب الطرق.
- إذا تم إدخال ملين الأقمشة في موزع الملين، يتم إضافته تلقائيًا في دورة الشطف الأخيرة.

ضع الغسيل في الغسالة وأضف أيضاً المسحوق.

- لا تتجاوز حمل الغسيل في الغسالة. استخدم المسحوق الملائم للمنسوجات التي تغسلها.

ملاحظة!

- إذا كان الباب مفتوحاً أثناء التشغيل، تتوقف الغسالة عن العمل تلقائيًا للأمان. (فيما عدا ذلك، يستمر تزويد الماء أثناء فتح الباب.)
- عندما يتم اختيار الماء الساخن، يتم توريد كلاً من الماء البارد والساخن في العشرين دقيقة الأولى لحماية الملابس.
- يمكن التحكم في مدة الغسيل ودورة الشطف ومدة التنشيف في كل دورة أثناء الغسيل.

■ **الدورة "الرقمية (الذكية)"**



تحديد دورة الغسيل المثلى تلقائياً.

١. اضغط على الزر "الطاقة" (POWER) من أجل الوضع "تشغيل" (ON).
٢. اضغط على الزر "تشغيل/توقف" (START/HOLD).

يتم تحديد مستوى الماء تلقائيًا. ثم يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر "تشغيل/توقف" (*START/HOLD*) مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٣. أغلق الباب.

■ **الدورة "بطانية/ثقيل"**

(الغسيل ذو الحجم الكبير مثل البطاطين وملاءات الأسّرة)

١. اضغط على الزر "الطاقة" (power) من أجل الوضع "تشغيل" (ON).
٢. اضغط زر تحديد "الدوران" (course) مرة واحدة.
٣. اضغط على الزر "تشغيل/توقف" (START/HOLD).

يتم تحديد مستوى الماء تلقائيًا. يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر "تشغيل/توقف" (*START/HOLD*) مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الباب.

- اطو الغسيل ذا الحجم الكبير (البطاطين وملاءات السرير) بالطريقة التالية قبل وضعه بداخل المجفف.
- لا تغسل البطانية الكهربائية والسجاد.
- ضع الغسيل الخفيف وكبير الحجم في شبكة الغسيل (على سبيل المثال، الملابس الصوفية) حيث أن حجمها يزيد في الماء مما قد يتسبب في الضرر.

■ **دورة اقتصادية +** option

١. اضغط على الزر «الطاقة» (power) من أجل الوضع «تشغيل» (ON).
٢. اضغط زر تحديد الدوران مرتين.
٣. اضغط على الزر «تشغيل/توقف» (START/HOLD).

يتم تحديد مستوى الماء تلقائيًا. ثم يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر «تشغيل/توقف» (*START/HOLD*) مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الباب.

■ دورة (ثوب) سريعة

تستخدم هذه الدورة إذا كنت ترغب في غسيل المناشف التي تستخدم بشكل متكرر أو الغسيل قليل الاتساخ.

لأن الغسيل يكون سريع في هذه الدورة ولذا فهي جيدة للغسيل المتسخ اتساخاً خفيفا.

١. اضغط على الزر "الطاقة" (power) من أجل الوضع "تشغيل" (ON).
٢. اضغط زر تحديد "الدوران" (course) أربع مرات.
٣. اضغط على الزر "تشغيل/توقف" (START/HOLD).

يتم تحديد مستوى الماء تلقائيًا. يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر "تشغيل/توقف" (*START/HOLD*) مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الباب.

■ الدورة "صوف"

تستخدم هذه الدورة للسترات القابلة للغسيل والسترات الصوفية والملابس الخفيفة، الخ.

١. اضغط على الزر "الطاقة" (power) من أجل الوضع "تشغيل" (ON).
٢. اضغط زر تحديد "الدوران" (course) أربع مرات.
٣. اضغط على الزر "تشغيل/توقف" (START/HOLD).

يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر "تشغيل/توقف" (*START/HOLD*) مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الباب.

تنبيه...

- لا تستخدم ماء تزيد درجة حرارته على ٣٠ درجة مئوية لغسيل "الصوف".
- راجع العلامة الموجودة على الملابس لمعرفة معلومات الغسيل.
- أغلق الأزرار واقلب الملابس على ظهرها قبل الغسيل.
- استخدم مسحوق الغسيل الموضح في الغسيل.
- عندما تكون الملابس متسخة بدرجة كبيرة، انقع الغسيل في ماء دافئ حوالي عشر دقائق قبل الضغط على زر دورة "الصوف" وذلك لتحسين فاعلية الغسيل.

■ تأجيل التشغيل

كيف يتم حجز الغسيل؟

حدد هذا الدوران عندما تكون مضطراً للخروج أو القيام بأي شيء آخر.

١. اضغط على الزر "الطاقة" (power) من أجل الوضع "تشغيل" (ON).
٢. اضغط زر تحديد "الدوران" (course).
٣. اضغط على الزر "تأجيل التشغيل" (DELAY START) مرة واحدة.

يمكنك تغيير وقت تأجيل التشغيل باستخدام الزر «تأجيل التشغيل». (من ٣ إلى ١٨ ساعة)

٤. اضغط على الزر "تشغيل/توقف" (START/HOLD). وضع الكمية المناسبة من المسحوق في الدرج.
٥. أغلق الباب.

تنتهي عملية الغسيل في الوقت الذي حددته.

أضف المسحوق وملين الأقمشة بالتناسب مع مستوى الماء. ثم أغلق الباب.

- يجب إضافة المسحوق في درج المسحوق.
- في حالة وضع المسحوق مباشرة على الغسيل، تفقد بعض الملابس لونها في حال تأخير التشغيل.
- إذا تطلب الأمر إلغاء "تأجيل التشغيل"، اضغط على الزر "الطاقة" (power).
- يتغير وقت إنهاء التشغيل الذي حددته بناء على ضغط الماء.

■ التنظيف المتميز option

١. اضغط الزر «تشغيل».
٢. اضغط الزر «تنظيف متميز».
٣. اضغط على الزر «تشغيل/توقف» (START/HOLD)، وضع الكمية المناسبة من المسحوق في الدرج.
   - يتم تحديد مستوى الماء تلقائيًا.
   – يتم تحديد مستوى الماء الأقصى ~ متوسط فقط.
٤. أغلق الباب.
   - تنتهي عملية الغسيل في الوقت الذي حددته.

■ تنظيف الحوض

١. اضغط على الزر "الطاقة" (POWER).
٢. اضغط على الزر "الدوران" (COURSE) لتحديد دورة "بطانية" (BLANKET).
٣. اضغط الزر «وظيفة» (FUNCTION) لتحديد «نقع» (SOAK).
   يمكنك تحديد توريد الماء أو درجة الحرارة (ساخن/بارد).
٤. اضغط على الزر «مستوى الماء» (WATER LEVEL) لتحديد «الأقصى» (MAXIMUM).
٥. اضغط على الزر «تشغيل/توقف» (START/HOLD).
٦. أضف المسحوق ثم أغلق الباب.

- لا تقم أبدًا بوضع الغسيل في الحوض عند القيام بتنظيفه، فقد يؤدي ذلك إلى تلطخ ألوان الغسيل أو تلفه.
- عند القيام بالغسيل بعد تنظيف الحوض، قد تجد بعض الرواسب التي ترجع إلى بقايا المادة المنظفة الناتجة عن عملية التنظيف.
  قم بإجراء دورة الشطف من مرتين إلى ثلاث مرات.

وظائف يدوية

تتغير كل دوران الغسيل يدوياً.
على سبيل المثال) إذا كنت ترغب في الغسيل في الدوران السريع: زر التشغيل - تحديد دوران سريع -غسيل - الزر "تشغيل/إيقاف

ملاحظة: وتشمل دورة البطاطين بشكل أساسي وظيفة «النقع».



وظيفة "غسيل+"
(إذا كنت ترغب في إضافة وقت غسيل إضافي. استخدم الوظيفة «غسيل+»)
اضغط على الزر «الطاقة» (POWER).
حدد الدوران(اضغط زر الدوران).
البطاطين أو اقتصادي+ أو سريع أو صوف
اضغط زر «الوظيفة» مرة واحدة.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
يتم تحديد مستوى الماء تلقائيًا.
غسيل ثم شطف ثم تجفيف.

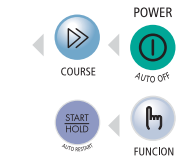

الوظيفة "نقع وغسيل+"
اضغط على الزر «الطاقة» (POWER).
حدد الدوران(اضغط زر الدوران).
البطاطين أو اقتصادي+ أو سريع أو صوف
اضغط زر «الوظيفة» مرتين.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
يتم تحديد مستوى الماء تلقائيًا.
النقع ثم الغسيل ثم الشطف ثم التجفيف.

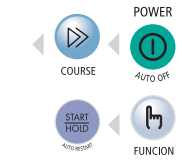

الوظيفة "نقع"
اضغط على الزر «الطاقة» (POWER).
حدد الدوران(اضغط زر الدوران).
البطاطين أو اقتصادي+ أو سريع أو صوف
اضغط الزر «وظيفة» ثلاث مرات.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
يتم تحديد مستوى الماء تلقائيًا.
النقع ثم الغسيل ثم الشطف ثم التجفيف.

الغسيل فقط
اضغط على الزر «الطاقة» (POWER).
اضغط الزر «تحديد الوظيفة» أربع مرات.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
عند الضغط على الزر «وظيفة» أثناء الغسيل. يمكن تغيير مدة الغسيل لمدة تتراوح بين ٣ دقائق و٢٥ دقيقة.

الشطف فقط
اضغط الزر «وظيفة» خمس مرات.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
عند الضغط على الزر «وظيفة» أثناء الشطف. يمكن تغيير عدد مرات الشطف لتتراوح من مرة واحدة إلى خمس مرات.

التنشيف فقط
اضغط الزر «وظيفة» ست مرات.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
عند الضغط على الزر «وظيفة» (FUNCTION) أثناء التنشيف. يمكن تغيير مدة التنشيف من دقيقة إلى ٧ دقائق.

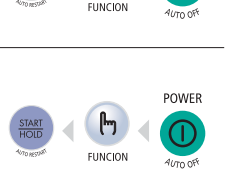

الغسيل والشطف
اضغط الزر «وظيفة» سبع مرات.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
عند الضغط على الزر «وظيفة» أثناء التشغيل. يمكن تغيير عدد مرات الشطف من مرة إلى ٥ مرات.

الشطف والتنشيف
اضغط الزر «وظيفة» ثماني مرات.
اضغط على الزر «تشغيل/توقف» (START/HOLD) مرة واحدة.
يتم متابعة عمليتي الشطف والتنشيف.
عند الضغط على الزر «وظيفة» أثناء التشغيل. يمكن تغيير عدد مرات الشطف لتتراوح من ١ مرة إلى ٥ مرات.

التثبيت والصيانة

دليل المستخدم مخصص للاستخدام العام.
يعتمد استخدام دليل المستخدم على طراز الغسالة.

■ البيئة

اترك مساحة

اترك مسافة تقدر بـ ١٠ سم بين الغسالة والحائط.

ضع الغسالة على أرض ثابتة ومستوية.

في حالة وضع الغسالة على سطح غير مستو أو ضعيف، يؤدي ذلك إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل. (المسافة المسموح بها ١ ياردة)

قم بتعديل الأرجل للوضع المتوازن.

لا تقم أبداً بتثبيت الغسالة بالقرب من الماء.

لا تضع الغسالة في غرف ينبعث منها البخار أو حيث تكون معرضة بشكل مباشر إلى المطر. قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.

تجنب الضوء المباشر لأشعة الشمس أو الأجهزة الحرارية.

تتأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الفرن أو غلايات الماء إلى آخره، لا تضعها تحت أشعة الشمس المباشرة.

■ الاستواء

- إذا لم تكن الغسالة مستوية على الأرض، فستهتز بشكل كبير أو ستكون غير صالحة للتشغيل. ولذلك، تأكد من أن الغسالة مستوية بشكل صحيح.

فحص استواء الغسالة من خلال وضع حاوية الغسيل.

- افتح باب الغسالة، ثم اسكب الماء داخل حاوية الغسيل حتى المستوى الذي يقع أدنى المضخة، وقم بتعديل الأرجل بحيث تكون المضخة في وسط الماء كما هو مبين في الشكل.
- ابعد الغسالة أكثر من ١٠ سم عن الحائط.
- قم بضبط الأرجل.

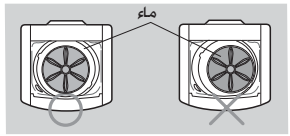

■ توصيل خرطوم التزويد بالماء

١. أزل المحول من خرطوم تزويد الماء.



٢. أولاً، باستخدام ملف برغي من نوع "+" أرخ البراغي الأربعة الموجودة بالمحول. ثم أخرج المحول ودور الجزء (ب) باتجاه السهم لإحداث فجوة تقدر بنحو ٥ مم بينهما



٣. صل المحوّل بصنبور الماء بربط البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزءين (أ) و (ب) معاً.

٤. صل خرطوم تزويد الماء بالمحول. اسحب الجزء (ج) من خرطوم تزويد الماء لأسفل. عند إرخاء الجزء (ج)، يتصل الخرطوم إلى المحوّل تلقائياً محدثاً صوت "إغلاق".



٥. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.



٥-١. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.

☜ إذا كان صنبور الماء من نوع برغي، ركب خرطوم تزويد بالماء بلائم الصنبور كما هو موضح..



بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.
استخدم صنبور من النوع العادي للتزويد بالماء.
إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور إلى المحوّل.

■ تركيب لوحة الحماية من الفئران option

أمل الغسالة قليلاً وارفع اللوحة حتى يتم إغلاقها. وفي النهاية قم بتثبيت اللوحة ببرغي في القاعدة كما هو موضح بالشكل.

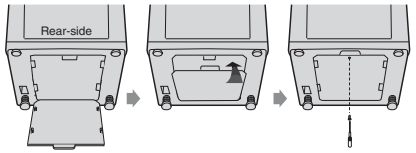

١. أدخل لوحة امتصاص الصوت في فتحة التجميع الموجودة خلف الغسالة في المؤخرة

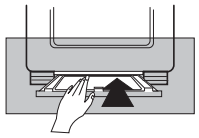

٢. إذا واجهتك صعوبات في إدخال اللوحة ارفع الغسالة قليلاً وقم بإدخالها.

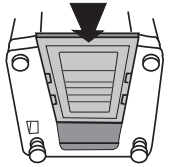

■ كيفية توصيل خرطوم التصريف option

في حالة استخدام غسالة ذات مضخة تصريف

انزع غطاء الخرطوم وصل خرطوم الصرف.

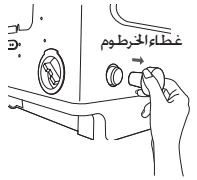

تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في ظهر الغسالة.

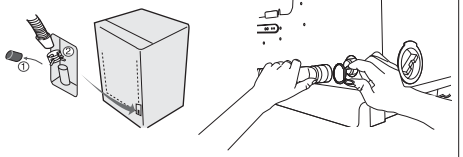

تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في جانب الغسالة.

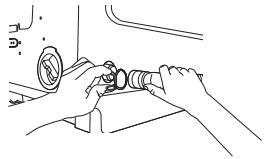

ثبت خرطوم تصريف الماء على بعد يقدر بنحو ٩٠~١٠٠ سم عن الأرض.

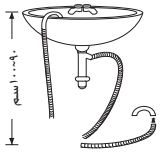

في حالة الغسالة العامة

١. بعد الضغط على حلقة الوصل، أدخل خرطوم تصريف الماء.

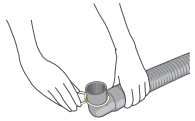

٢. بعد توجيه خرطوم تصريف الماء إلى المصرف، صله بمخرج التصريف الخاص بالغسالة.



٣. تأكد من اتصاله بإحكام بالضغط على حلقة الوصل ودفعها في مخرج التصريف.



- يمكن تعديل طول خرطوم التصريف بحيث يمكنك إطالته ليصل إلى الطول الملائم.

كيفية تغيير اتجاه خرطوم التصريف



- يتم الضغط على مقبض حلقة الوصل لدفع خرطوم تصريف الماء. قم بتغيير اتجاه خرطوم التصريف واتبع الإرشادات أعلاه مرة أخرى.

تنبيهات حول إدخال خرطوم تصريف الماء

١. في حالة استخدام خرطوم تصريف الماء ووصله بخراطيم أخرى يجب ألا يزيد طوله عن ٣ متر.



٢. كن حذراً في تصريف الماء حتى نهاية خرطوم التصريف.



٣. يجب ألا تزيد عتبة الباب عن ٥ سم.



٤. لا تقم بتثبيت خرطوم تصريف الماء أسفل الغسالة.



■ كيفية إضافة ملين الأقمشة option

- عند تخزين كمية مناسبة (مقدار مرة واحدة) من ملين الأقمشة في مكان توريد الملينات، يتم وضعها في الدورة الأخيرة من الشطف.
- لا تستخدم المسحوق، أو المبيض، أو النشا في درج الملين.
- يؤدي الإفراط في استخدام الملين إلى نتائج غير مرضية.
- لا تفتح الباب أثناء دورة "التنشيف". إذا تم إضافة ملين الأقمشة في وقت سابق، فإن هذا سينقص من فعاليته.
- لا تترك ملين الأقمشة في درج الملين.
قم بتوزيعه لمدة أطول، حيث أن الملين يصبح يابساً.

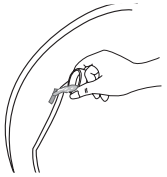

■ كيفية وضع المسحوق option

١. افتح درج المسحوق بدفعه باتجاه السهم كما هو موضح في الشكل ثم ضع المسحوق في الدرج المخصص له.
٢. ضع في كل مرة كمية ملائمة من المسحوق بحيث لا يفيض المسحوق من الدرج.

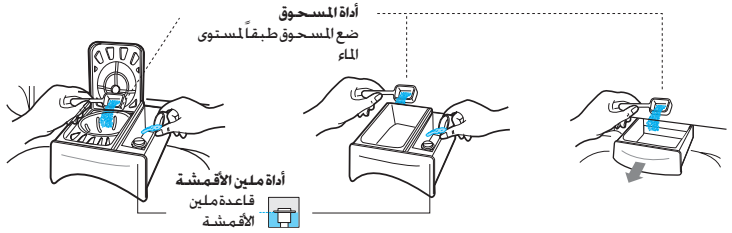

تنبيه: إذا تم تخزين ملين الأقمشة أعلى الخط الرئيسي، قد يفيض في أي وقت.

مصفاة وصلة تزويد الماء



١. انزع المصفاة واغسلها جيداً.

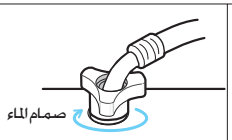

٢. ادفع المصفاة وصل الخرطوم بصمام تزويد الماء بإحكام.

٣. تحقق من عدم وجود ارتشاحات.
انتبه إلى إحكام الوصلة.

■ تنظيف المصفاة option

نظف شبكة المصفاة بانتظام للمحافظة على نظافة الغسالة.

١. ادفع الجزء العلوي من المصفاة الفعالة واجذبه للداخل.

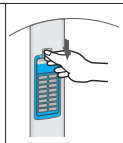

١. انزع شبكة المصفاة وادفعها للخارج.



٢. افتح الغطاء كما هو مبين بالشكل.



٢. أزل النسالات المتجمعة من شبكة المصفاة.

٣. نظف المصفاة الفعالة.

٣. نظف شبكة المصفاة.

٤. أغلق الغطاء وأدخل أولاً الجزء السفلي في الحاوية ثم ادفع المصفاة، تسمع صوت "تثبيتها".

٤. ادفع شبكة المصفاة لأسفل.



■ كيفية تنظيف مصفاة المضخة option

١. ضع قطعة من القماش أسفل مصفاة الغسالة حتى لا تبتل الأرض.
٢. لف المصفاة عكس عقارب الساعة وانزعها.
٣. أزل الأوساخ ولف المصفاة مرة أخرى في اتجاه عقارب الساعة لإعادتها إلى مكانها.

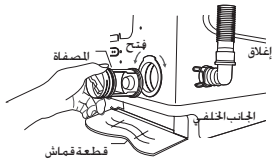

استكشاف المشاكل وحلها

الغسالة لا تعمل

هل صنبور الماء مفتوح؟
هل جهاز الغسالة متصل بمصدر التيار الكهربي؟
هل التيار الكهربائي مقطوع؟
هل ضغط الماء كافي؟

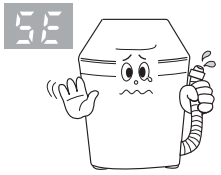

لا يتم تصريف الماء

هل خرطوم التصريف موضوع لأسفل؟(بدون مضخة)
هل خرطوم التصريف متجمد؟
هل خرطوم التصريف مسدود؟
إذا لم يتم تصريف الماء خلال ١٥ دقيقة، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "5E".

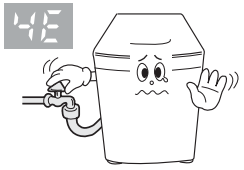

لا يتم تزويد الماء

هل صنبور الماء مفتوح؟
هل الماء مقطوع؟
هل خرطوم تزويد الماء أو وصلة الخرطوم مسدودة؟
هل صنبور الماء متجمد؟
إذا لم يتم تزويد الماء في خلال ساعة، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "4E".

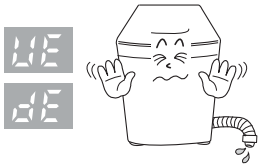

عملية التنشيف لا تعمل

هل تم توزيع الغسيل بالتساوي في الغسالة؟
هل تم وضع الغسالة على أرض ثابتة ومستوية؟

زيادة الماء

إعادة التشغيل بعد التنشيف.
في حالة استمرار ظهور علامة الخطأ، اتصل بالشركة.

هل توقفت الغسالة عن العمل؟

تم فصل التيار الكهربائي.

تحقق من ١> هل فولتية التيار الكهربائي كالمعتاد؟
تحقق من ٢> هل جهاز الغسالة متصل بمصدر التيار الكهربي؟ قم بتوصيل سلك التيار الكهربائي.
↻ لا يتم تصريف الماء.
تحقق من ٣> هل يتجه خرطوم التصريف إلى أسفل؟ ضع خرطوم التصريف لأسفل.
تحقق من ٤> هل خرطوم التصريف مثني؟ فك الثنيات الموجودة في خرطوم التصريف.
تحقق من ٥> هل فتحة خرطوم التصريف مسدودة؟ أزل النفايات.

الغسالة لا تعمل.

تحقق من ١> هل باب الغسالة مفتوح؟
↻ أغلق الباب.
تحقق من ٢> هل الزر "توقيف" (Hold) في وضع تشغيل؟
↻ اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة أخرى وتأكد من بدء تشغيل الغسالة.
تحقق من ٣> تحقق من ٣> هل تم ملء الماء حتى المستوى المطلوب؟
↻ إذا كان ضغط الماء منخفضاً، فستستغرق عملية بدء تشغيل الغسالة وقتاً طويلاً.
تحقق من ٤> هل الصنبور مغلق؟
↻ افتح الصنبور للتزويد بالماء.

إذا كان خرطوم التصريف والمجفف متجمدين، قم بما يلي.

- أضف الماء الساخن إلى حاوية الغسيل المتجمدة وأزل خرطوم التصريف. انقع الخرطوم في الماء الساخن.
- اسكب الماء الساخن في المجفف لمدة ١٠ دقائق.
- ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف.
- بعد فك تجميد خرطوم التصريف، قم بتوصيله مرة أخرى وتحقق مما إذا كان تصريف الماء يتم بالشكل الملائم.

يتم تصريف الماء في الحال.

- في حالة انسداد خرطوم التصريف بعملات معدنية أو دبابيس، قم بتعليق خرطوم التصريف على الخطاف. املأ نصف المجفف بالماء وحاول التنشيف مرة أخرى.

يرتشح الماء في وصلة خرطوم تزويد الماء.

تحقق من ١> تحقق من ١> إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط، قد يرتشح الماء.
↻ كرر خطوات التركيب مرة أخرى. (راجع "توصيل خرطوم تزويد الماء")
تحقق من ٢> تحقق مما إذا كان المطاط الخاص بخرطوم تزويد الماء في وضعه الصحيح.
↻ اربط البراغي مرة أخرى بإحكام.
تحقق من ٣> هل خرطوم تزويد الماء مثني؟
↻ فك الثنايا الموجودة في خرطوم التصريف.
تحقق من ٤> إذا كانت عملية تزويد الماء قوية جداً، قد يحدث تسرب.
↻ أغلق الصنبور قليلاً.
تحقق من ٥> هل حدث تسرب للماء من الصنبور؟
↻ أصلح الصنبور. لا يتم تزويد الماء.
تحقق من ٦> هل قمت بالضغط على الزر "تشغيل/توقف" (Start/Hold) بعد تحديد "تزويد الماء" (water supply)؟
↻ في حالة عدم الضغط على الزر "تشغيل/توقف" (Start/Hold)، لن يتم تزويد الماء. اضغط على الزر "تشغيل/توقف" (Start/Hold).
تحقق من ٧> هل الصنبور مغلق؟
↻ افتح الصنبور.

تحقق من ٨> هل شبكة المصفاة الموجودة في خرطوم تزويد الماء مسدودة بأوساخ؟
⊂ نظف شبكة المصفاة بفرشاة أسنان.

تحقق من ٩> هل تم إيقاف تزويد الماء؟
⊂ في حالة توقف تزويد الماء، أغلق الصنبور وافصل التيار.

تحدث عملية التنشيف ضجيجاً واهتزازات.

تحقق من ١> تحقق مما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة.
⊂ وزع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى.

تحقق من ٢> تحقق مما إذا كانت الغسالة مستوية على أرض ثابتة ومسطحة.
⊂ اجعل الغسالة مستوية.

تحقق من ٣> هل المقابض الخاصة باستواء الأرجل غير مربوطة بإحكام؟
⊂ اضبط استواء الأرجل.

تحقق من ٤> هل يوجد حول الغسالة مواد غير ضرورية؟
⊂ أبعد تلك الأشياء غير الضرورية عن الغسالة.

المواصفات

WA90F3/WA95F3

الأبعاد (مم)			العرض ٥٧٣ × العمق ٦٣٢ × الارتفاع ٩٠٣	مستوى الماء القياسي	الأقصى	٥٥ لتر
					عالي	٤٩ لتر
الوزن			٣٣ كجم		متوسط	٤٣ لتر
					أقل من متوسط	٣٥ لتر
ضغط الماء			من ٠,٠٥ إلى ٠,٧٨ ميغاباسكال (٠,٥ ~ ٨,٠ كجم • قوة/سم٢)		حد أدنى	٢٧ لتر
				استخدام الماء		١٤٠ لتر
نوع الغسيل			نوع الحركة	مصدر التيار الكهربي		١٢٧ فولت/٥٠ ~ ٦٠ هرتز ٢٣٠ ~ ٢٤٠ فولت/٥٠ هرتز ٢٢٠ فولت/٥٠ ~ ٦٠ هرتز
إدخال الموتور	الغسيل		٣٣٠ وات	سرعة دوران المضخة		١١٣ دورة في الدقيقة
	التنشيف		٢٤٦ وات	سرعة دوران حوض التجفيف		٦٦٠ دورة في الدقيقة
أقصى إدخال للموتور	الغسيل	الوقت المقدر	٣٣٠ وات	الغسيل		تابع
	التنشيف			التنشيف		١٥ دقيقة

لمعرفة فولتية وتردد التشغيل، راجع علامة التصنيف الموجود على ظهر الغسالة.

اتصل بـ SAMSUNG WORLD WIDE
في حالة وجود أي استفسارات أو تعليقات حول منتجات سامسوخ،
الرجاء الاتصال بمركز خدمة عملاء سامسوخ.